User Guide

Clock Radio with Voice Command

NS-CLVR01

Insignia NS-CLVR01
Clock Radio with Voice Command

Contents

Introduction 3
Safety information 3
Features 5
Setting up your clock radio 7
Using your clock radio 10
Using voice commands 10
Using manual buttons 13
Troubleshooting 17
Maintaining 18
Specifications 18
Legal notices 19
90-day limited warranty 21

Introduction

Congratulations on your purchase of a high-quality Insignia product. Your NS-CLVR01 represents the state of the art in clock radio design and is designed for reliable and trouble-free performance.

Safety information

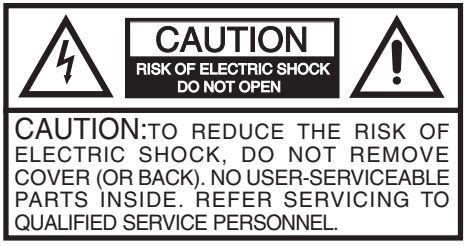
CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
CAUTION:TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within your clock radio's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

	The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying your clock radio.

1) Read these instructions.

2) Keep these instructions.

3) Heed all warnings.

4) Follow all instructions.

5) Do not use this apparatus near water.

6) Clean only with a dry cloth.

7) Do not block any ventilation openings. Install in accordance with the manufacture's instructions.

8) Do not install near any heat source, such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9) Do not defeat the safety feature of the polarized or grounding-type plug. A polarized plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet. Consult an electrician for replacement of the obsolete outlet.

10) Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit the clock radio.

11) Only use attachments/accessories specified by the manufacturer.

12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13) Unplug this clock radio during lightning storms or when unused for long periods of time.

14) Refer all servicing to qualified service personal. Servicing is required when the clock radio has been damaged in any way, such as the power cord or plug is damaged, liquid has been spilled or objects have fallen into the clock radio, the clock radio has been exposed to rain or moisture, does not operate normally, or has been dropped.

15) Do not expose your clock radio to dripping or splashing liquids, and no objects filled with liquids should be placed on it.

16) Excessive sound pressure from earphones and headphones can cause hearing loss.

17) The AC adapter is used as the disconnect device and it shall remain readily operable during use. In order to disconnect the clock radio, the AC adapter should be removed from the AC power outlet completely.

18) The batteries (battery pack and batteries installed) should not be exposed to excessive heat, such as sunshine, fire, or similar heat sources.

Note
Read Rating Labels on the bottom of the system for power input and other safety information.

Features

Note
Voice commands are recognized in English only.

Package contents

Your clock radio includes the following items:

- Clock radio
- AC power adapter
- *User Guide*
- *Quick Setup Guide*
- AAA alkaline batteries (3)

Front view

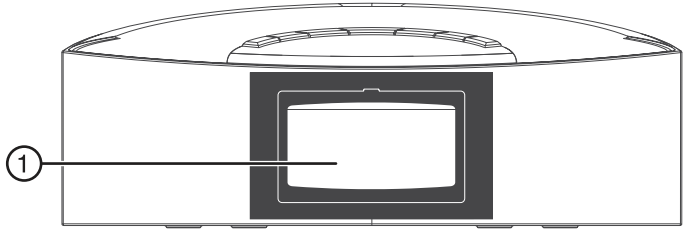

#	Feature	Description
1	LCD display	Provides information about the clock radio functions.

Top view

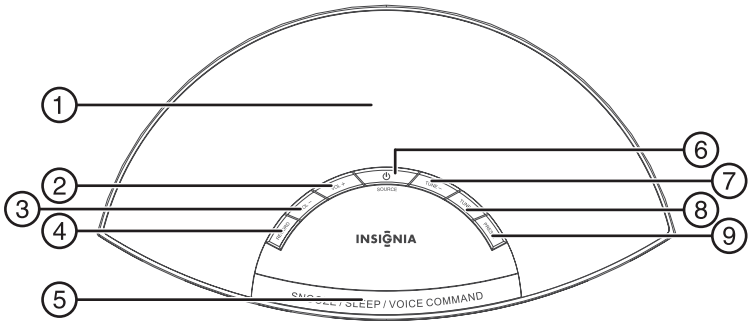

#	Feature	Description
1	Speakers and microphone	Produces the sound (speakers) and receives voice commands (microphone).
2	Volume + button	Press to increase the volume of the clock radio.
3	Volume – button	Press to decrease the volume of the clock radio.
4	RECORD button	Press to record the preset station names.
5	SNOOZE/SLEEP/ VOICE COMMAND BUTTON	Press to start the voice commands, or press and hold to set the sleep timer. When the alarm is sounding, press to temporarily turn off the alarm (snooze).
6	⏻ /SOURCE button	Press and hold to turn the clock radio on or off. When the radio is on, repeatedly press to cycle through AM, FM, and Aux in.
7	Tune – button	Press to tune or scan the radio to a lower frequency.
8	Tune + button	Press to tune or scan the radio to a higher frequency.
9	PRESET button	Press repeatedly to recall preset stations.

Back view

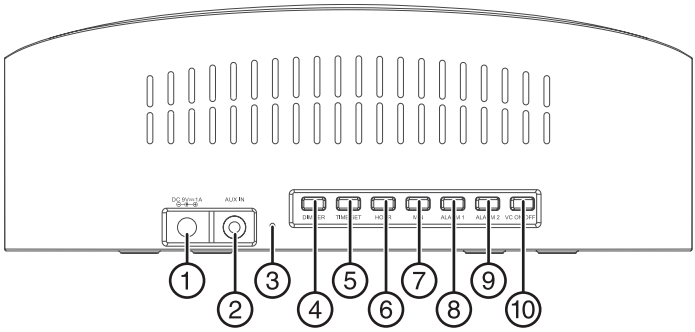

#	Feature	Description
1	DC in jack	Connect the AC power adapter here.
2	AUX in jack	Connect a cable from an external audio source to this jack to hear the sound through your clock radio.
3	FM antenna (wire)	Uncoil and extend this wire antenna to improve FM radio reception.
4	Dimmer button	Press to adjust the backlight of the LCD.
5	Time set button	Press and hold to enter the time set mode.
6	Hour button	Press to set the hour.
7	Minute button	Press to set the minutes.
8	Alarm 1 button	Press and hold to select Alarm 1 and change the setting.
9	Alarm 2 button	Press and hold to select Alarm 2 and change the setting.
10	VC ON/OFF button	Press turn the voice command function on or off.

Setting up your clock radio

Installing the backup batteries

The clock radio uses a backup battery system to maintain clock and alarm settings in the event of a power failure. If the backup batteries have been installed and a power failure occurs or the AC cord is accidentally disconnected, the display will not remain lit, but the current time and alarm time settings (the alarm will not sound) will be temporarily maintained. Otherwise, you must reset the time and alarm settings.

A battery indicator icon will appear on the display if the batteries are low.

Make sure the AC cord is connected. Otherwise all settings may be lost during battery replacement.

To install the backup batteries:

1. Open the battery compartment cover located on the bottom of your clock radio.

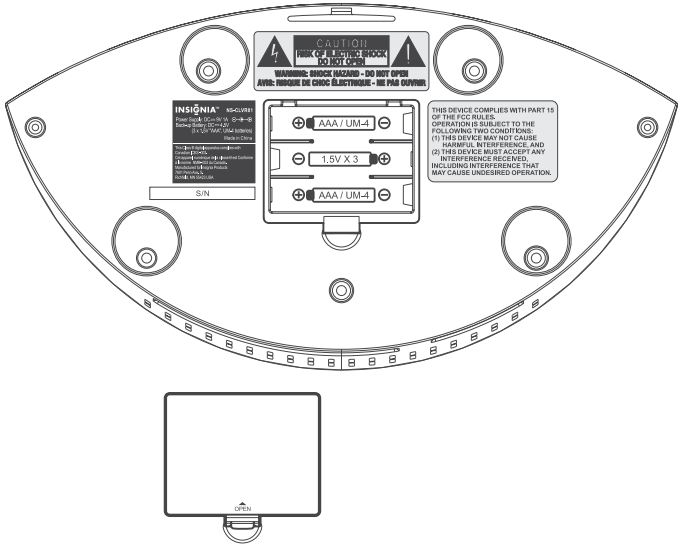
CAUTION
WARNING: SHOCK HAZARD - DO NOT OPEN
AVIS: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR
AAA / UM-4
1.5V X 3
AAA / UM-4
S/N
THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.
OPEN

2. Insert three “AAA” batteries, checking that the polarity (+ and - ends of the batteries) matches the drawing inside the battery compartment. We recommend the use of alkaline batteries for longer life.
3. Close the battery compartment cover.

Warnings

- Do not recharge, short, disassemble, or heat the batteries, or dispose of in a fire.
- Dispose of battery in the proper manner, according to federal, state, and local regulations.
- Remove the batteries when the charge is depleted.
- Battery chemicals can cause a rash. If the batteries leak, clean the battery compartment with a cloth. If chemicals touch your skin, wash immediately.
- Do not mix different types of batteries.
- Do not try to recharge non-rechargable batteries.

Making connections

Connecting the AC power adapter

Make sure that the AC power outlet matches the AC adapter's power specifications (110 V ~ 60 Hz) prior to plugging in the adapter.

To connect the AC adapter:

1. Plug the small DC power connector into the DC IN 9V jack on the back of your clock radio.
2. Plug the AC adapter into an AC power outlet.

Note

- Remove both the DC plug and the AC-IN plug to disconnect the AC power adapter when not in use.
- Use only the supplied AC power adapter to power your clock radio. (DC 9V, 1A)

Connecting an external sound source

You can listen to an external sound source, such as a CD, MD, or non-docking iPod®, on your clock radio.

To listen to an external sound source:

1. Make sure that your clock radio is turned off.
2. Connect the external sound source to the **AUX IN** jack on the back of your clock radio using a stereo 3.5mm plug cord (not supplied).
3. Press and hold the ⏻ **/SOURCE** button for two seconds to turn on your clock radio.
4. Press the ⏻ **/SOURCE** button repeatedly until "AUX" appears on the display.
5. Start playback on the external sound source, then adjust the volume to a comfortable level. Control playback on the external audio device.

Setting the clock

You can also set the clock using voice commands. See "Using voice commands" on page 10.

To set the clock:

1. Press and hold the **TIME SET** button on the back of your clock radio. The time blinks on the LCD.
2. Press **MIN** (minute) to set the minutes and **HOUR** to set the hours. Make sure that you set AM/PM correctly.
3. Press **TIME SET** again. The clock is set.

Using your clock radio

Note
Voice commands are recognized in English only.

Turning your clock radio on and off

To turn your clock radio on and off:

1. Press and hold ⏻ **/SOURCE** for two seconds. Your clock radio turns on.
2. Press **DIMMER** on the back of your clock radio to set the display backlight of the LCD to a comfortable level.
3. Press and hold ⏻ **/SOURCE** again to switch your clock radio to standby mode.

Using voice commands

Tips

- Keep the background fairly quiet.
- Speak clearly and in a normal tone.
- Give correct commands (refer to command list below).
- Do not give commands when the clock radio is speaking.
- Speak near the microphone located on the top of the clock radio.

Note
When the clock radio is waiting for your commands, always respond within three seconds. If no response is received from you within this time, the clock will reply “Sorry, I did not recognize your command.” The clock radio will revert to standby mode if it asks this more than two times. You will hear “Sorry, I am having trouble understanding you. Please try again later” before it quits.

To use voice commands:

1. To activate the voice interactive commands, make sure that the voice control button on the back of the clock radio is set to on (the “VC” indicator appears on the LCD display).
2. Say “Voice Command” to the clock radio or press the **SNOOZE/ SLEEP/VOICE COMMAND** button. The clock will respond “What can I do for you?.”

3 Say any of the following commands for the function you want, then follow the voice prompts carefully:

Command	The Radio Responds	What's Next
Time	The current time is - -: - - (AM/PM)	The clock tells you the current time.
Set Time	Please say the current time including AM or PM.	Say the time you want to set.
	The time is now set to - -: - - (AM/PM).	If the clock radio failed to understand the time stated, it will give an example of how to say it correctly.
	I am sorry, please say current time, for example six fifteen AM.	If the clock still does not recognize what you say after three tries, it will respond again.
	Sorry, I am having trouble understanding you. Please try again later.	Try again later.
Alarm	Please say alarm one or alarm two	Say "one" or "two."
	Alarm one (or two) is set to - - : - - (AM/PM).	The clock radio will also tell you if the alarm is on or off, as well as the existing alarm sound set.
	The alarm is On. The alarm sound is (Radio/Buzzer). Do you want to turn it off?	You may either answer "Yes," "No," or "Cancel." If you say "Yes," the clock radio will confirm.
	Alarm one is now turned off.	If the instruction is "No" or "Cancel," the clock radio will quit the alarm setting mode and your previous setting will be kept as it is.
Set Alarm	Please say alarm one or alarm two.	Say "one" or "two."
	Please say the alarm time including AM/PM.	Say the alarm time you want.
	Alarm one (or two) is set to - -:- - (AM/PM).	The clock radio will ask for confirmation.
	Please say confirm or reset.	If you say "confirm," the clock radio will continue.
	Please say buzzer alarm or radio alarm.	To wake to radio, say "radio alarm" and the clock radio will confirm.
	The alarm sound is radio.	The alarm is set.
	Note If you would like to change the alarm time after you have already stated the time, when the clock radio asks "Please say confirm or reset," you should say "reset." The clock radio will ask "Please say the alarm time including AM or PM." You can also say "Cancel" if you do not want to continue the alarm setting.	

Command	The Radio Responds	What's Next
Sleep Time	To set sleep time, please say 90, 75, 60, 45, 30, 15 minutes or Cancel.	Say the sleep time interval you want. The clock radio will set the sleep time for you.
	The timer is set to - - minutes to turn off.	The sleep icon (**zzZ**) appears on the display and the sleep time will display for five seconds and then return to the previous mode.
	Note If you set the sleep timer with a voice command when the clock radio is in standby mode, after the sleep time setting is finished the clock radio will change to radio mode by asking "Please say FM or AM". It will then tune to the last played station in the band that you selected.	
Radio	Please say FM or AM.	Say "FM" or "AM."
	Please say the station name.	Say the station name. **Note**: You must have recorded a station name for this to work. See "To record a preset name" on page 13. If the clock radio recognizes the station name successfully, the clock radio will display the station frequency on the screen and tune to that station. If the clock radio does not recognize the station name, it will inform you.
	Sorry, I am having trouble understanding you. Please try again later.	
	Note If the clock radio still cannot recognize the station name you have given after three tries, it will say "Sorry, I am having trouble understanding you. Please try again later." The clock radio will then return to the last station played.	
Help	You can say Time, Set time, Alarm, Set alarm, Sleep time, Radio, Help or Cancel. To record or change a radio station name, first select the station using the Preset button, then press the record button. What can I do for you.	Say the command for the help you want.
Cancel	(None)	This command cancels voice commands. If there is no response received from you after three seconds, the clock radio will go to standby mode automatically.

To record a preset name

To record a preset name:

1. Press and hold the ⏻ **/SOURCE** button for two seconds to turn on your clock radio.
2. Press the ⏻ **/SOURCE** button repeatedly to select the **AM** or **FM** band.
3. Press **PRESET** repeatedly until you reach the station you want to record.
4. Press the **RECORD** button. The clock radio will respond “Please say the station name.”
5. Speak the name you want to set for that particular preset station, for example “News Station.”
6. The clock radio responds “Please repeat station name.”
7. Speak the name again.

   To confirm that the setting was successful, the clock radio will reply, “Thank you. Station name recorded for station preset (__).” The radio will then switch to radio mode.

Note

- If the name is too similar to the name of other preset stations set earlier, the clock will suggest that you choose a different name by saying “The name is too similar to existing station name, please choose a different name and try again.”
- If the setting is not successful, the clock radio will state “Training failure, please try again.” You are allowed two tries.

Using manual buttons

Setting and using the alarm

You can also set the alarm using voice commands. See “Using voice commands” on page 10.

To set the alarm:

1. Press and hold the **ALARM 1** or **ALARM 2** button (depending on which alarm you want to set) until the display blinks.

2 Press **HOUR** to set the hour you want to wake up, then press **MIN** (minute) to set the minute. Make sure you set AM/PM correctly.

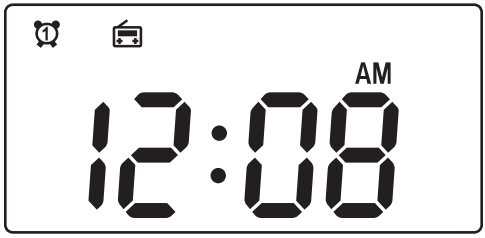

3 Briefly press **ALARM 1** or **ALARM 2** again to save the setting. The display stops blinking.

Note

When the unit is in radio or AUX mode, if no key is pressed within 10 seconds, the clock radio returns to the current clock automatically.

To set the alarm to buzzer or radio:

1 Press **ALARM 1** or **ALARM 2** repeatedly to select radio or buzzer. As you press the button, the radio or buzzer icon appears on the display.

To turn the alarm off:

1 If the alarm is on, press any button (except **SNOOZE/SLEEP/ VOICE COMMAND**) to turn off the alarm. The alarm will be set for the next day.

2 If you do not want to set the alarm for the next day, press **ALARM 1** or **ALARM 2** until “ALARM 1” or “ALARM 2” indicator disappears from the display.

To use the snooze feature:

1 While the alarm is sounding, press the **SNOOZE/SLEEP/VOICE COMMAND** button. The **SNOOZE** indicator appears on the display.

2 To cancel snooze (the alarm will not turn back on), press **ALARM 1** or **ALARM 2** (depending on the alarm set). The **SNOOZE** indicator disappears from the display.

3 Press **ALARM 1** or **ALARM 2** repeatedly to select from **alarm off** (the alarm will not be set for the next day), or alarm on **buzzer** or **radio** (the alarm will be set for the next day).

> **Note**
> If set to **Radio** or **Buzzer**, the alarm automatically turns on for 20 minutes, then shuts off.

To set the sleep timer:

1 Turn on the radio.

2 Press and hold the **SNOOZE/SLEEP/VOICE COMMAND** button for two seconds until the sleep indicator "**zzZ**" appears on the display. "15" also appears on the display, indicating that the radio will turn off in 15 minutes.

3 Press the **SNOOZE/SLEEP/VOICE COMMAND** repeatedly to increase the sleep timer in 15 minute increments up to 90 minutes. The radio automatically turns off after the selected interval.

4 After you set the sleep timer, the real time is shown on the display. Press and hold **SNOOZE/SLEEP/VOICE COMMAND** again to show the remaining sleep time for five seconds.

5 To cancel the sleep timer, press **SNOOZE/SLEEP/VOICE COMMAND** repeatedly until "OFF" shows on the display.

Playing the radio

To play the radio:

1 Press and hold the ⏻ **/SOURCE** button for two seconds to turn on your clock radio.

- Press the ⏻ **/SOURCE** button repeatedly to select the **AM** or **FM** band.
- If you are listening to FM, uncoil and extend the FM antenna on the back of your clock radio and move it around to improve reception.

  -OR-

- If you are listening to AM, turn the radio slightly to improve reception.

- Press **TUNE +** or **TUNE –** to tune the radio to a higher or lower frequency.
- Press the **VOLUME +** or **VOLUME –** buttons to increase or decrease the volume. Adjust the volume to a comfortable level.
- Press and hold **TUNE +** or **TUNE –** for more than one second to scan to a higher or lower frequency. The radio automatically scans to the next station.

2 Press and hold the ⏻ **/SOURCE** button to turn off your clock radio.

Using radio station presets

Your clock radio can store five AM and five FM station presets.

To store radio station presets:

1 Press and hold the ⏻ **/SOURCE** button for two seconds to turn on your clock radio.

2 Press the ⏻ **/SOURCE** button repeatedly to select the **AM** or **FM** band.

3 Press **TUNE +** or **TUNE –** to tune the radio to a desired station.

4 Press and hold the **PRESET** button for two seconds. “P01” flashes on the display.

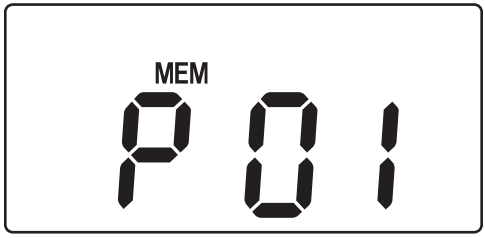

5 Press **TUNE +** or **TUNE –** to select the preset number for the station.

6 Press the **PRESET** button again to store the station as a preset.

7 Repeat steps 3 to 6 to store as many as five AM presets and five FM presets.

Recalling radio station presets

To recall radio station presets:

1 Press and hold the ⏻ **/SOURCE** button for two seconds to turn on your clock radio.

2 Press the ⏻ **/SOURCE** button repeatedly to select the **AM** or **FM** band.

3 Press the **PRESET** button repeatedly to select the preset station you want.

Note
You can also recall presets using voice commands if a name is recorded for the preset station. See “Using voice commands” on page 10.

Troubleshooting

Problem	Cause/Solution
No power	• Make sure that the AC power adapter is fully inserted into the AC power outlet. • Make sure that the AC power outlet is working.
No sound from the speakers	Make sure that the volume level is set correctly.
Static or noise when playing the radio	• Make sure that the station is tuned correctly and that the station has a good signal. • Try another station. • If you are playing an AM station, rotate the clock radio to improve the reception. • If you are playing an FM station, extend the antenna wire to improve the reception.
The sound is distorted	• Make sure that the volume level is not set too high. • Make sure that the material on the sound source is not distorted. Try a different external sound source.
The clock radio gets warm after extended play at high volume levels	This is normal.
The clock radio does not respond when I give a command	Make sure that the **VC ON/OFF** button on the back of the clock radio is turned On. When it is On, you should see the VC icon on the display.
The clock radio does not hear my commands	You cannot give a command while the clock radio is on. Avoid background noise when talking to this clock radio as well.
The clock radio cannot recognize my commands	Depending on the ambient noise and how you speak, there may be times when the radio will not understand your commands. If this happens, just repeat the commands (see below regarding pronunciation), the clock radio should respond properly.

Problem	Cause/Solution
The clock radio confuses numbers when setting the time or alarm	This is common in English. For example, it is common to confuse nine and five. Try again. Speak loud and clear near the MIC on top of the clock radio. **Note**: Always pronounce “0” as “oh” instead of “zero.” For example, if you want to set the time at 11:05 PM, you should say “Eleven oh five PM.”
The clock resets to “12:00”	The back-up batteries are not installed correctly, not installed, or dead. Check or replace the back-up batteries. And then set the clock again.
No sound from an external sound source	Make sure the external device is connected correctly and the clock radio is in AUX mode.

Maintaining

Cleaning your clock radio

To clean your clock radio, follow these guidelines:

- Use a soft, clean cloth moistened with plain, luke-warm water to clean the exterior of your clock radio.
- Do not let liquid drip into the inside of your clock radio.
- For stubborn stains, use a soft cloth dampened with a weak solution of mild detergent and water. Dry your clock radio immediately afterwards with a clean cloth. Do not use abrasive clothes, thinners, alcohol, or other chemical solvents, because they may damage the finish or remove the panel lettering.

Specifications

Specifications are subject to change without notice.

Frequency range	Bands: Range:	FM and AM FM - 87.5~107.9 MHz (200 KHz steps) AM - 530~1710 KHz (10 KHz steps)
Station presets	FM - 5 AM - 5	
External connections	3.5 mm stereo	
Volume	0-16 levels	
Speakers	2 x 2” - 4 ohm full range 2W x 2 RMS	

Power	AC power adapter - 110V 60 Hz to 9V,1A DC - 3 x AAA batteries for memory backup

Legal notices

FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

FCC warning

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

ICES-003 Class B Notice

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

90-day limited warranty

Insignia Products (“Insignia”) warrants to you, the original purchaser of this new **NS-CLVR01** (“Product”), that the Product shall be free of defects in the original manufacture of the material or workmanship for a period of 90 days from the date of your purchase of the Product (“Warranty Period”). This Product must be purchased from an authorized dealer of Insignia brand products and packaged with this warranty statement. This warranty does not cover refurbished Product. If you notify Insignia during the Warranty Period of a defect covered by this warranty that requires service, terms of this warranty apply.

How long does the coverage last?

The Warranty Period lasts for 90 days from the date you purchased the Product. The purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a retail store location, take your original receipt and the Product to the store you purchased it from. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from an online web site, mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain in-home warranty service for a television with a screen 30 inches or larger, call 1-888-BESTBUY. Call agents will diagnose and correct the issue over the phone or will have an Insignia-approved repair person dispatched to your home.

Where is the warranty valid?

This warranty is valid only to the original purchaser of the product in the United States, Canada, and Mexico.

What does the warranty not cover?

This warranty does not cover:

- Customer instruction
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to acts of God, such as lightning strikes
- Accident
- Misuse
- Abuse
- Negligence
- Commercial use

- Modification of any part of the Product, including the antenna
- Plasma display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).

This warranty also does not cover:

- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage supply
- Attempted repair by anyone other than a facility authorized by Insignia to service the Product
- Products sold as is or with all faults
- Consumables, such as fuses or batteries
- Products where the factory applied serial number has been altered or removed

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289
www.insigniaproducts.com

Distributed by Best Buy Purchasing, LLC
7601 Penn Avenue South, Richfield, Minnesota, U.S.A. 55423-3645
© 2010 BBY Solutions, Inc.
All rights reserved. INSIGNIA is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.

www.insigniaproducts.com (877) 467-4289

Distributed by Best Buy Purchasing, LLC
7601 Penn Avenue South, Richfield, MN USA 55423-3645
© 2010 BBY Solutions, Inc.
All rights reserved. INSIGNIA is a trademark of BBY Solutions, Inc. Registered in some countries.
All other products and brand names are trademarks of their respective owners.

ENGLISH
10-0138